

# Wooden Louvered Guard CG-750-Wood models

## Installation and Assembly Instructions




**Talk to our sales and distribution partner today.**

01271 850 204 • [sales@energylabuk.com](mailto:sales@energylabuk.com)  
[energylabuk.com](http://energylabuk.com) • [in @the-energy-lab-solutions](https://www.linkedin.com/company/the-energy-lab-solutions)

**Supporting you at every install.**

Registered Address: Millennium House, Brannam Crescent, Roundswell Business Park,  
Barnstaple, Devon, EX31 3TD United Kingdom | Company Number: 08586990

Step 1: Arrange left and right side panels and front panel together, with the arrows pointing outwards

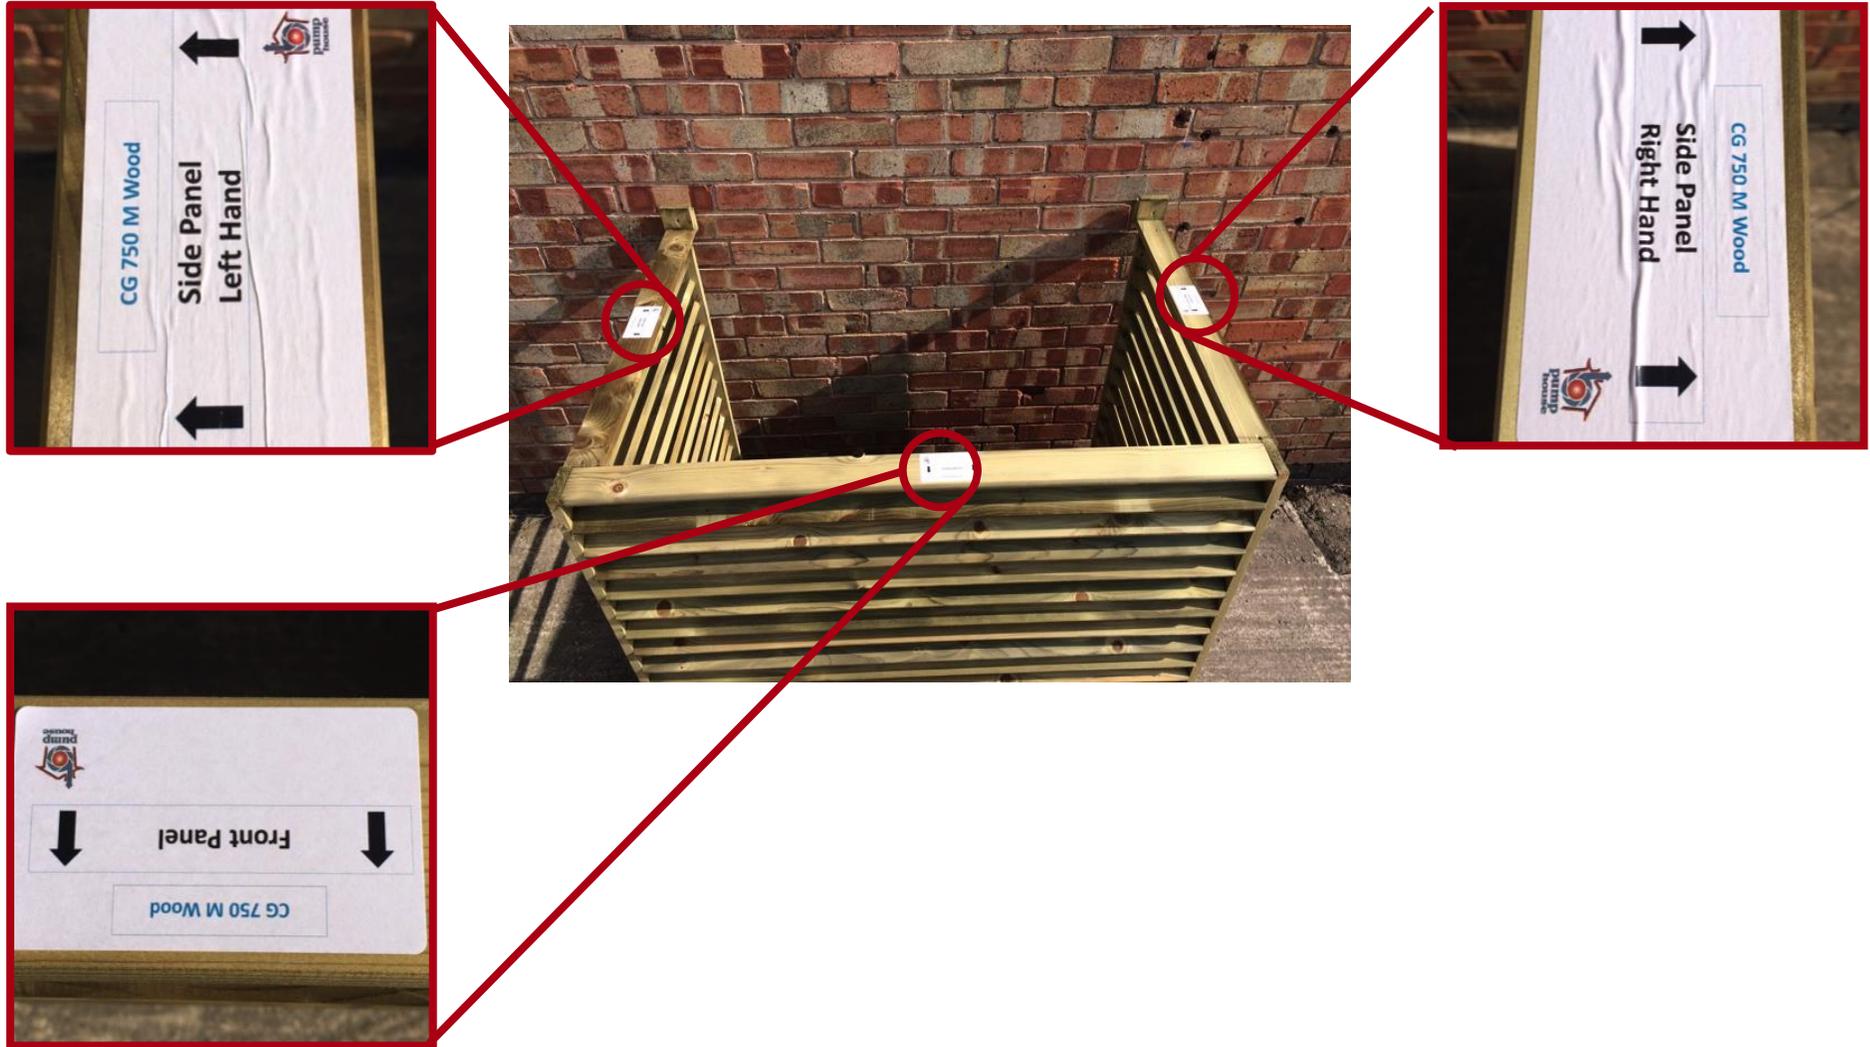


Step 2: Using 3 long screws on outside and 2 short screws on inside, attach the left hand side panel to the front panel

Outside Edge

Inside Edge



Step 3: Place back strut onto rear side panels and secure with 2 short screws

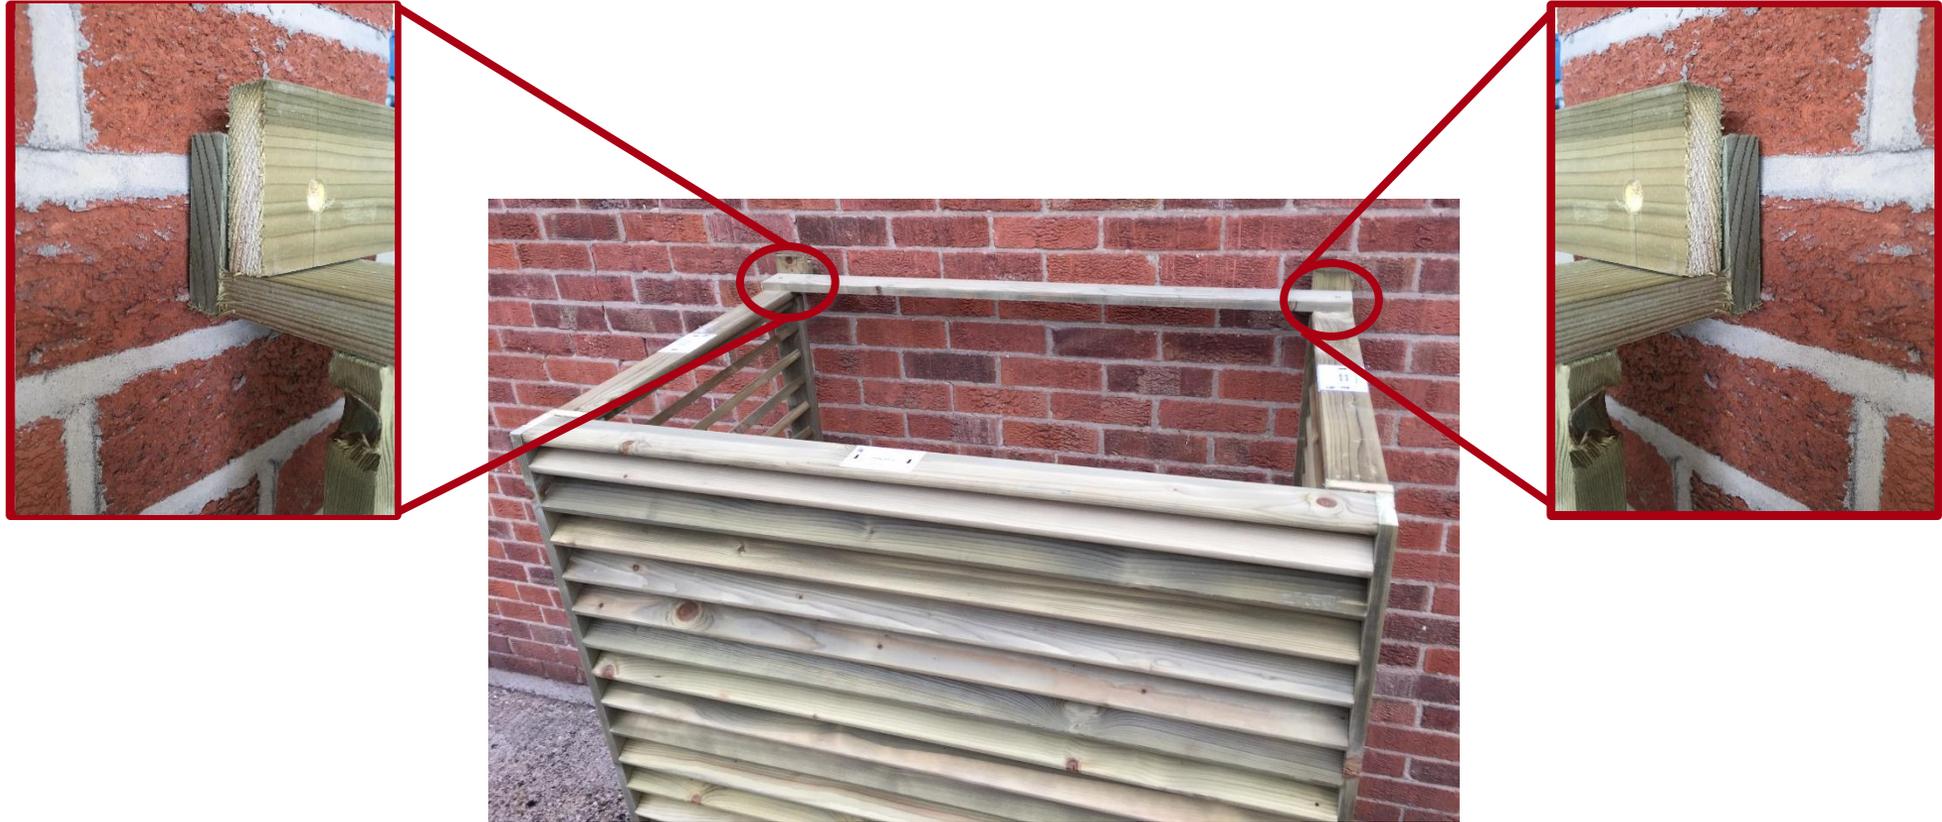

Step 4: Place top panel on top of the other panels. Use 2 short screws, one for each rear corner, which will attach the side panels to the top panel



Step 5: Overlap top panel on front panel. Use 2 long screws, one for each front corner, which will attach the front panel to the top panel

